

AirMyFun®

INSTRUCTION SHEET



WARNING !

- This product is intended for use by children ages 3 to 8 years and is not intended for children under 3 years due to their inability to use safely. Small parts. Choking hazard. Long Cord. Strangulation hazard.
- Only for domestic use. Indoor use or outdoor use is accepted.
- Keep the installation instruction for further reference. Please read all safety rules before setting up.
- MAXIMUM TWO CHILDREN ON SLIDE AT ANY ONE. EACH CHILD'S MAXIMUM INDIVIDUAL WEIGHT MUST NOT EXCEED 30KG(66LBS).
- No head-first sliding. Always slide feet-first.
- WARNING—Follow Anchoring Instructions
User must read and follow anchoring instructions to ensure the proper: number of anchors used, soil conditions, and stake installation.
- Any restrictions relating to operating surfaces and anchors.
- No shoes or glasses are to be worn on the inflatable device.
- WARNING- Electrocutation Hazard
Do not use extension cord with this product.
- WARNING: Failure to follow the installation and operating instructions present a risk of serious injury or death.
- Stakes are to be driven straight down until the top of the stake is below ground level. Do not drive stakes at an angle. For best holding strength, drive stakes into hard, dry soil. In loose or wet soil, or both, stake holding strength will be reduced.
- Do not use when wind speed exceeds 20 mph.
- Do not use in rainy conditions.
- Do not set up on slope. Place and use on flat lawn or level ground with firm soil for proper use of the stakes.
- Do not install inflatable devices over concrete, asphalt, packed earth, carpet or any other hard surface. A fall onto a hard surface can result in serious injury to the user.







WARNING ELECTRICALLY OPERATED PRODUCT

Adult supervision is required. As with all electrical products, precautions should be observed when handling and using the device. To avoid electric shock, follow these basic guidelines:

- Keep away from fire. Keep the blower away from water during use.
- Do not disconnect the blower during use.
- Do not use in bad weather conditions.
- Check the general condition of the device and the power sources before each use. If you notice a defect do not use it under any circumstances.

PART LIST

1.	Inflatable Bounce	x 1
2.	Electrical Blower with GFCI plug	x 1
3.	Blower Ground Stake	x 4
4.	Inflatable Bounce Ground Stake	x 9
5.	Carry Bag	x 1
6.	Repair patch	x 4

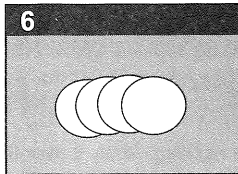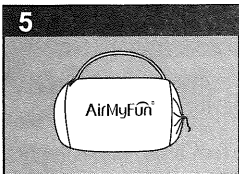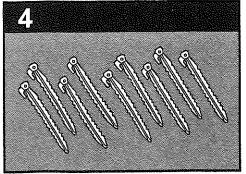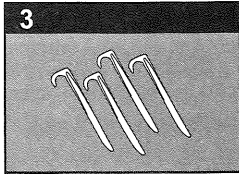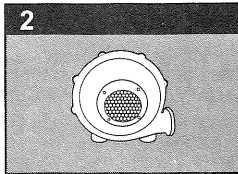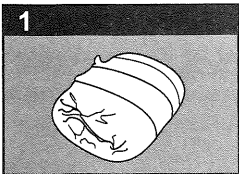

1. Supervision—Where to be located to ensure observation of all parts of the play area, all activity on the inflatable device and keeping the entrance free from obstruction at all times.
2. Users Dress Code—Avoid and remove all head gear, loose clothing, hard, sharp, or dangerous objects, such as, but not limited to: jewelry, ponchos, scarves, helmets, etc.
3. Separation of larger children from smaller children.
4. Prevention of users from climbing or hanging on the containing walls.
5. Prevention of inappropriate activities (for example, somersaults and rough play).
6. No food, drink and chewing gum are allowed on the inflatable device.
 - Correct use position of inflatable device (for example, on slide, climbing wall).
 - Keep pets off of the inflatable device.
 - Do not attach items to the inflatable device that are not specifically designed for use with the inflatable device, such as, but not limited to, jump ropes, clothesline, pet leashes, cables and chain as they have the potential to cause a strangulation hazard.

ELECTROCUTION RISK

Keep all electrical lines, radios, speakers and other electrical appliances away from the Constant Air Inflatable.

Do not place Constant Air Inflatable near or under overhead electrical lines.

 **CAUTION**



Electrical Hazard

WARNING!

To reduce the risk of fire or electric shock, do not use blower with any solid-state speed control device. Unplug or disconnect the blower from the power supply before servicing.

DANGER

To prevent electric shock, do not immerse the blower in water, wipe clean with damp cloth. Do not operate blower with a damaged cord or plug. Discard blower or return to an authorized service facility for examination and/or repair. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar covering. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.




CAUTION - ELECTRICALLY OPERATED PRODUCT

OPERATION OF BLOWER UNIT NOT RECOMMENDED FOR CHILDREN UNDER 12 YEARS OF AGE. AS WITH ALL ELECTRIC PRODUCTS, PRECAUTIONS SHOULD BE OBSERVED DURING HANDLING AND USE TO PREVENT ELECTRIC SHOCK.

RESPONSE TO EMERGENCY

- Keep a working phone and list of emergency numbers near the inflatable.
- Become certified in cardiopulmonary resuscitation (CPR). In the event of an emergency, immediate use of CPR can make a lifesaving difference.

INSTALLATION

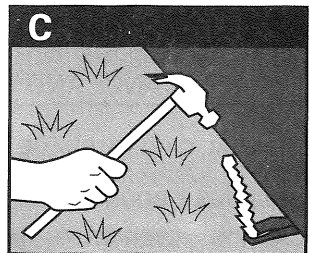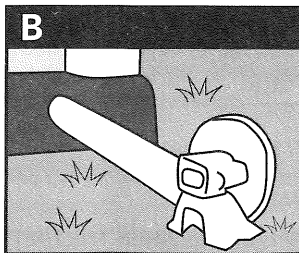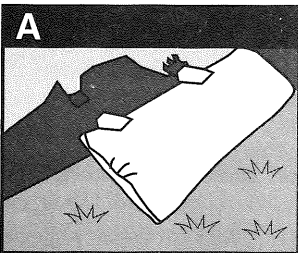

A: Check that the ground is clear of any object or debris. Unfold the structure, install it on a flat and tender surface, with a safety distance all around 2 meters minimum.

B: Place the blower in a dry place, away from any water source and make sure it is still. Stretch the inflation tube and attach it to the end of the blower. The inflation tube should be straight and untwisted. Connect the blower to an electrical outlet (110V-120V) and press ON. The structure inflates quickly. The blower must stay on all the time while using the product.


C: Firmly push the stakes into the ground at the straps located at the base of the inflatable structure to maintain the structure during use.

1. Unpack the slide and all components. Unfold and lay on a smooth, level and unobstructed area on grass or dirt. The surface should be free of rocks, bumps, depressions, sticks or glass or any debris. Avoid any sharp objects that might rip/tear the material. Be sure there are no pipelines, sprinkler systems or utilities under the ground before setting the inflatable in the desired area.
2. To protect the bottom of the inflatable, place a tarp underneath the unit.
3. Place an impact absorbing material such as EVA foam pad on the ground up to 6' next to the climbing wall and end of slide to protect children in case of accidental falling.
4. NOTE: This inflatable should be set up in a location that has a minimum distance of 10 ft (3 m) from any free-standing structures or obstructions, including: house, garage, fence, trees, laundry lines, electrical wires, playground equipment and large rocks around the unit, and a minimum clearance of 6.6 ft (2m) above the unit.

MAXIMUM FALL HEIGHT OF THE SLIDE: 19.6 inch (50 cm)

SIZE AFTER INFLATION: 8.5L x6.2D x 5.5H feet (2.6L x 1.9D x 1.7H meter)

DEFLATION AND FOLDING

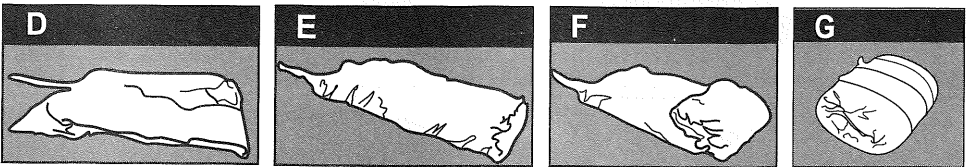

Deflating: Make sure all children are out of the structure.

Turn the blower switch to the OFF position and unplug the power cord. The structure will quickly collapse.

Detach the inflation tube from the blower and leave it well away from the structure (D)

Remove the ground stakes.

Folding: Fold the outer parts inward, driving out as much air as possible and so as to form a long rectangle (E).

Finish folding from the end opposite the air intake tube (F).

You can thus store the folded structure in the transport bag provided (G).

MAINTENANCE AND REPAIR

GENERAL CARE, STORAGE AND MAINTENANCE

INFLATABLE BOUNCE MAINTENANCE

CAUTION: NEVER STORE THE INFLATABLE WHEN THE UNIT IS STILL WET OR DAMP. ALLOW THE INFLATABLE TO DRY COMPLETELY BEFORE ROLLING UP FOR STORAGE.

- Check the slide regularly and thoroughly before, during and after each use for holes, tears, other damages and signs of deterioration. DO NOT USE a damaged or deteriorated product. A damaged or deteriorated product could cause the inflatable to become unstable and could become a safety hazard.
- Check the ground stakes holding the inflatable in place regularly. Damaged or loosened stakes could cause product instability and result in serious injury.
- Remove debris and clean pocket steps after each play cycle. Allow to dry.
- The inflatable is made from a nylon fabric material, simply wipe clean with a cloth dampened with neutral, non-inflammable, non-toxic cleaning and sanitizing solution or use pure water to clean the surface after each play cycle. Allow to dry.
- Do not use chlorine based cleaners or bleach cleaners as it may damage the threads. Do not use bathroom cleaners. Do not use any cleaners that warn "Do not use on soft vinyl". Do not use any abrasive cleaners. Keep in mind that children are going to come into close contact, so be sure to use a cleaner that is non toxic and safe.
- Do not allow food or drinks on the inflatable or the blower.

BLOWER MAINTENANCE

- Turn off and unplug blower before servicing.
- Check blower regularly for unsafe conditions including damaged cord, plug or housing. If damage is found, do not use the blower until repaired.
- Blower is equipped with Thermal Auto-reset Protection. If motor is overheated, the protector will trip to protect your safety. Turn off blower and let it cool down. Please follow blower instruction and check for wrong operation that may cause overheating.
- The blower does not require lubrication oil and has no user serviceable parts.
- Never leave the blower outside. Never leave the blower in wet weather conditions when not in use.
- Never immerse the blower in water. To clean blower, first make sure that it is turned off and unplugged, use a damp cloth to wipe the surface of blower. Allow to dry.
- Do not clean blower with chemical solution as this may damage the coating and plastic parts.
- Store the blower indoor in a safe and dry location away from children when not in use.
- Loosely coil the cord when storing the blower.

REPAIR KIT INSTRUCTIONS

⚠ WARNING: REPAIR PATCH MUST BE APPLIED BY ADULT ONLY. KEEP CHILDREN AWAY FROM THEM.

1. Repair holes, tears, or scratches in the inflatable fabric or mesh using the Quick Repair Patch.
2. Clean repair area, allow to thoroughly dry.
3. Cut a portion of repair patch and remove adhesive backing. Apply it over the torn area. Press firmly to smooth the patch.
4. Do not inflate the unit for one hour.

DISPOSAL

- Ensure no hazardous conditions exist when product is disposed.
- Blower should be disposed to collection center for processing electrical and electronic waste.
- Button cell batteries should be disposed through household battery collection program or as hazardous waste.

Maintenance: Checks and maintenance must be carried out at regular intervals on the structure to avoid damage or leakage. The product can be cleaned with a mild detergent. Always keep water away from the air blower. Do not store the product when it is wet. Store the product and the blower indoors in dry conditions when not in use.

Repair: A repair kit is supplied with each structure. If the fabric tears, please repair by sewing by hand. Cover the tear with a suitably sized piece of fabric from the kit. Then sew the repair fabric to its sides. When repairing, sewing should only take place on the surface layer of the original fabric and not reach its bottom layer. In the event of a large tear or internal structural damage, please change the structure or entrust the repair to a professional. It is not suggested to patch the same repair more than twice. The needles must be well maintained and must not be left on the product after sewing.

AirMyFun®

Email : support@airmyfun.com

MANUFACTURER: NEW TIME (JIANGXI) PLASTIC MFG. LTD
ADDRESS: JIAN YE ROAD, FONG SHOU INDUSTRIAL AREA,
WAN NIAN COUNTY, JIANGXI PROVINCE, CHINA.

DATE CODE: J0721

MADE IN SHAORAO CITY, JIANGXI CHINA

MADE IN CHINA